


TOYOTA FORTUNER WORKSHOP MANUAL

2004 – 2016 | COMPLETE REPAIR & SERVICE GUIDE



WORKSHOPMANUALS.COM

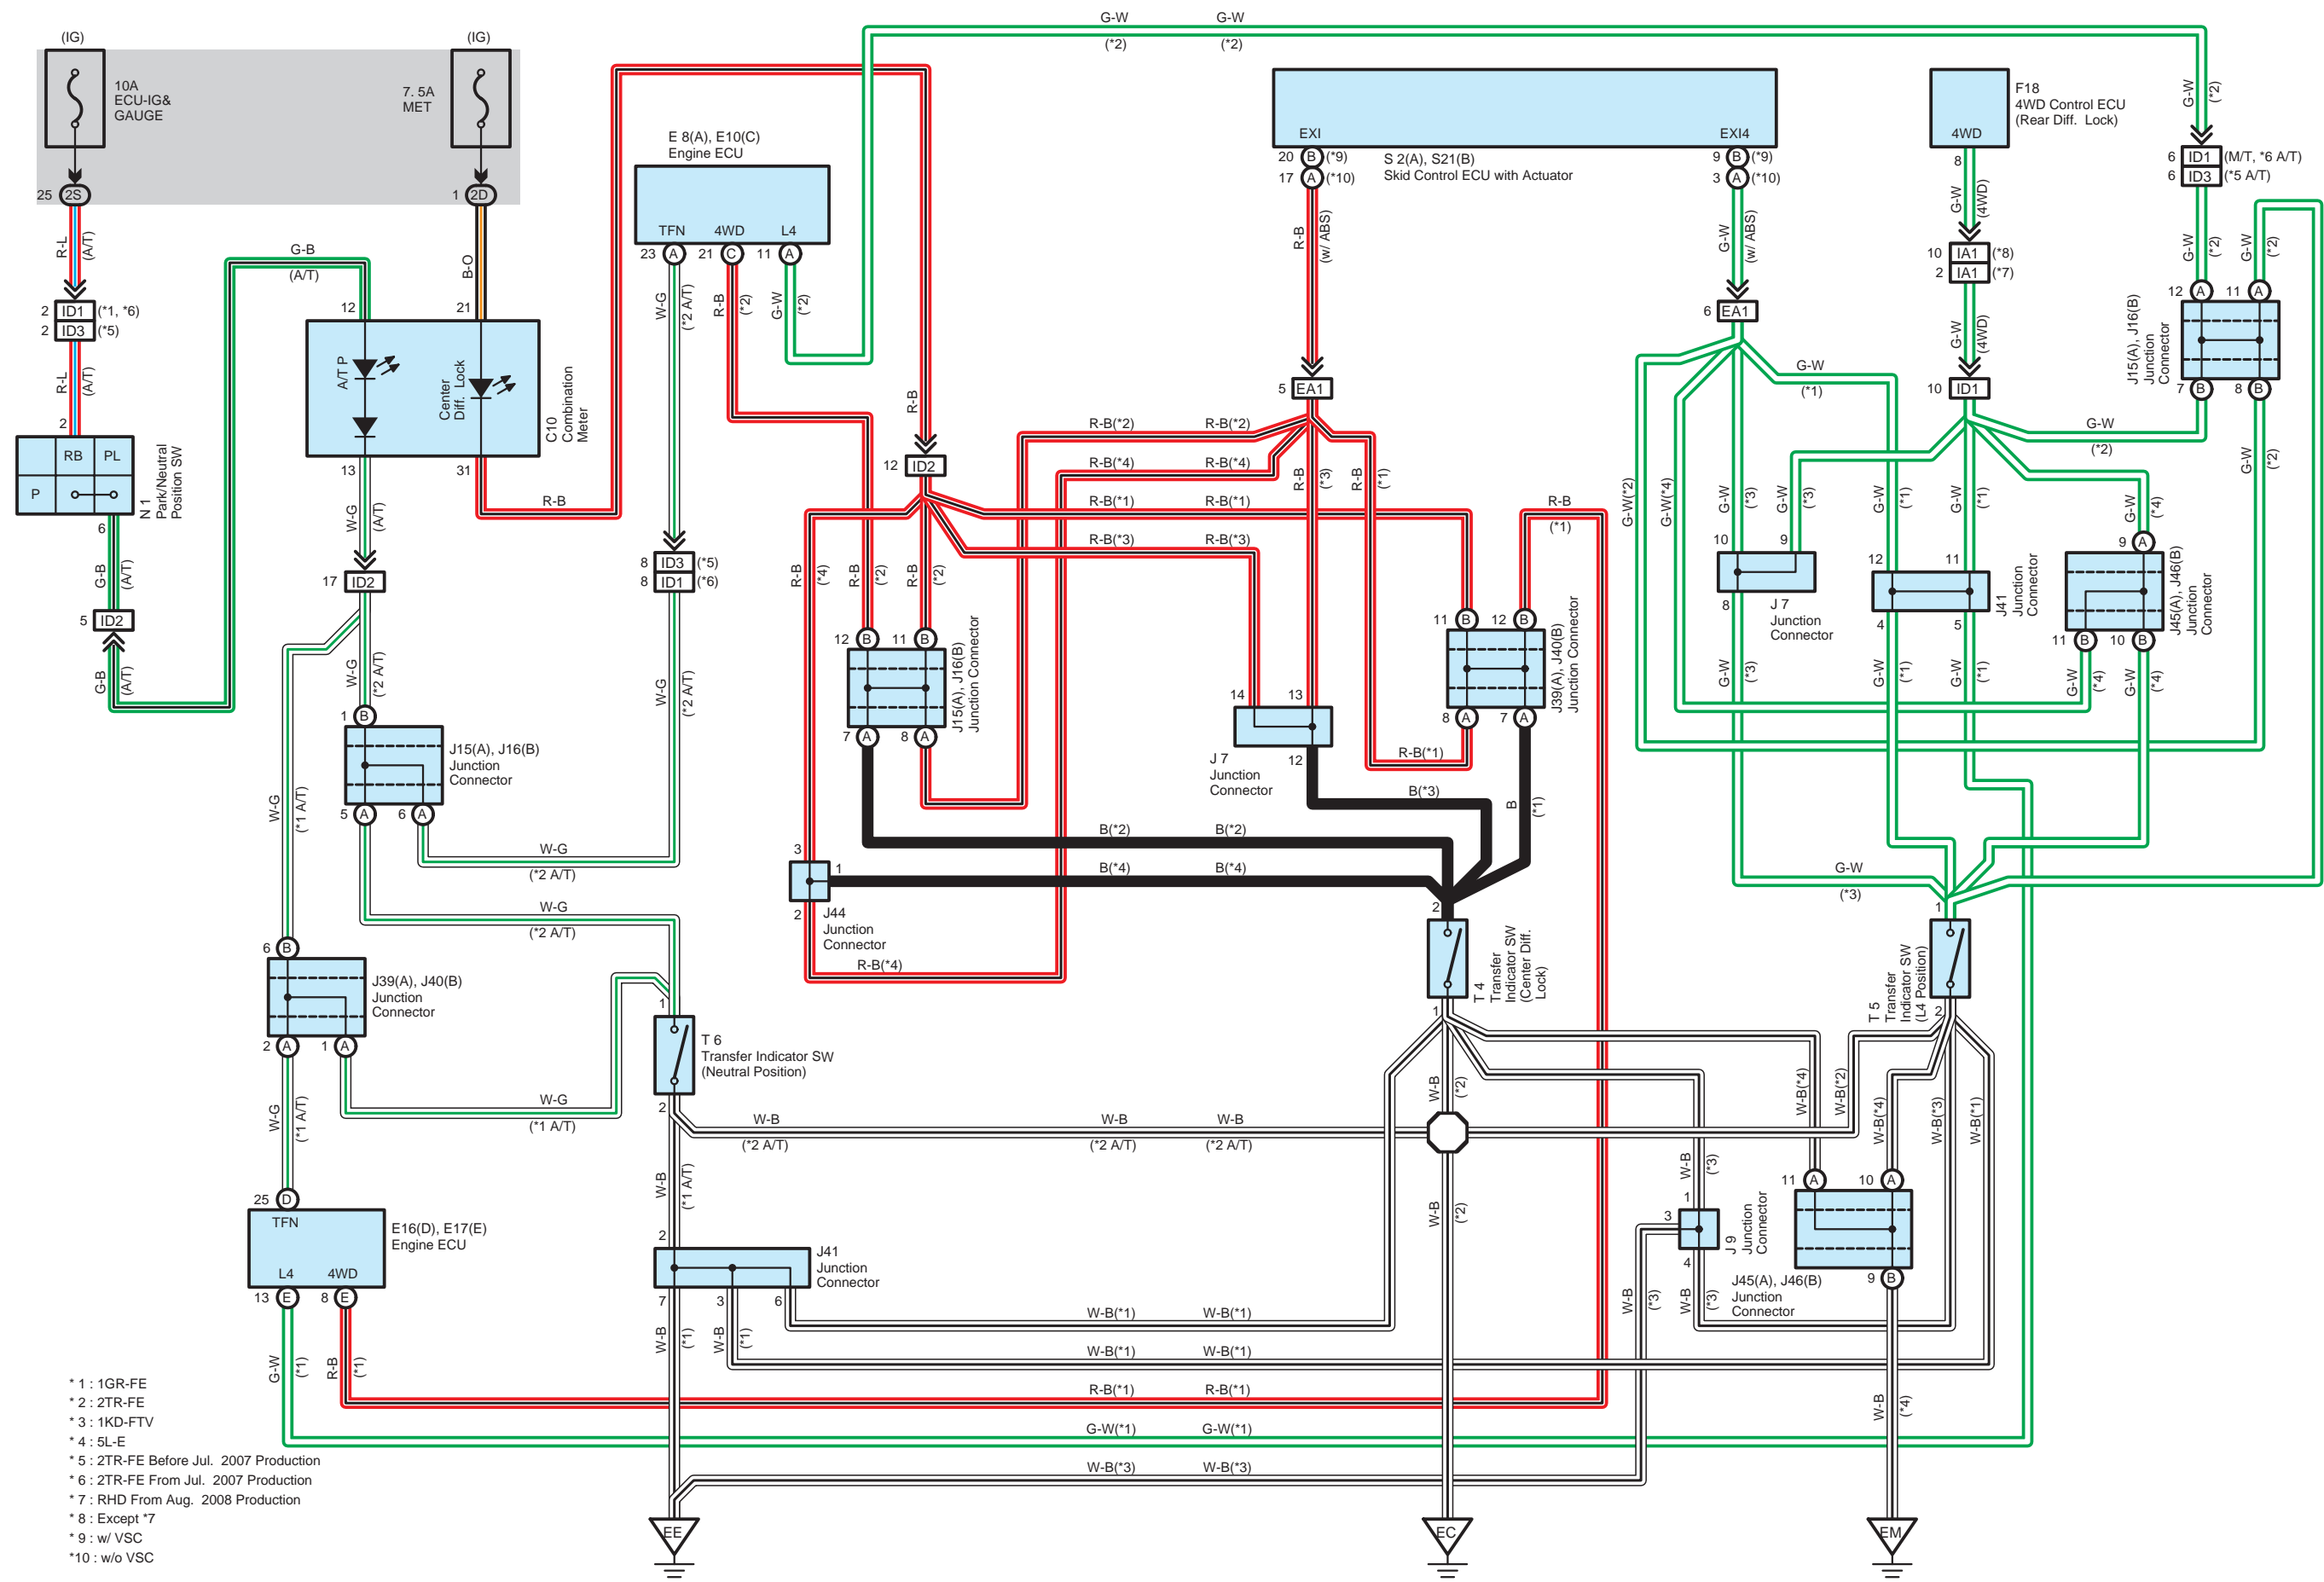

- * 1 : 1GR-FE
- * 2 : 2TR-FE
- * 3 : 1KD-FTV
- * 4 : 5L-E
- * 5 : 2TR-FE Before Jul. 2007 Production
- * 6 : 2TR-FE From Jul. 2007 Production
- * 7 : RHD From Aug. 2008 Production
- * 8 : Except *7
- * 9 : w/ VSC
- *10 : w/o VSC



GSIC - Global Service Information Center

TOYOTA FOR
/ GGN50, 60
KUN51, 61, 7

Repair Manual

New Car Features


Electrical Wiring Diagram

Body Repair

- READ ME
- INTRODUCTION
- SERVICE SPECIFICATIONS
- ENGINE
- TRANSMISSION
- DRIVE LINE
- SUSPENSION & AXLE
- BRAKE
- STEERING
- HEATER & AIR CONDITIONING SYSTEM
- RESTRAINTS
- SECURITIES
- CRUISE CONTROL SYSTEM
- BODY ELECTRICAL
- BODY
- COMMUNICATION SYSTEM



Position of Parts in Instrument Panel <LHD>















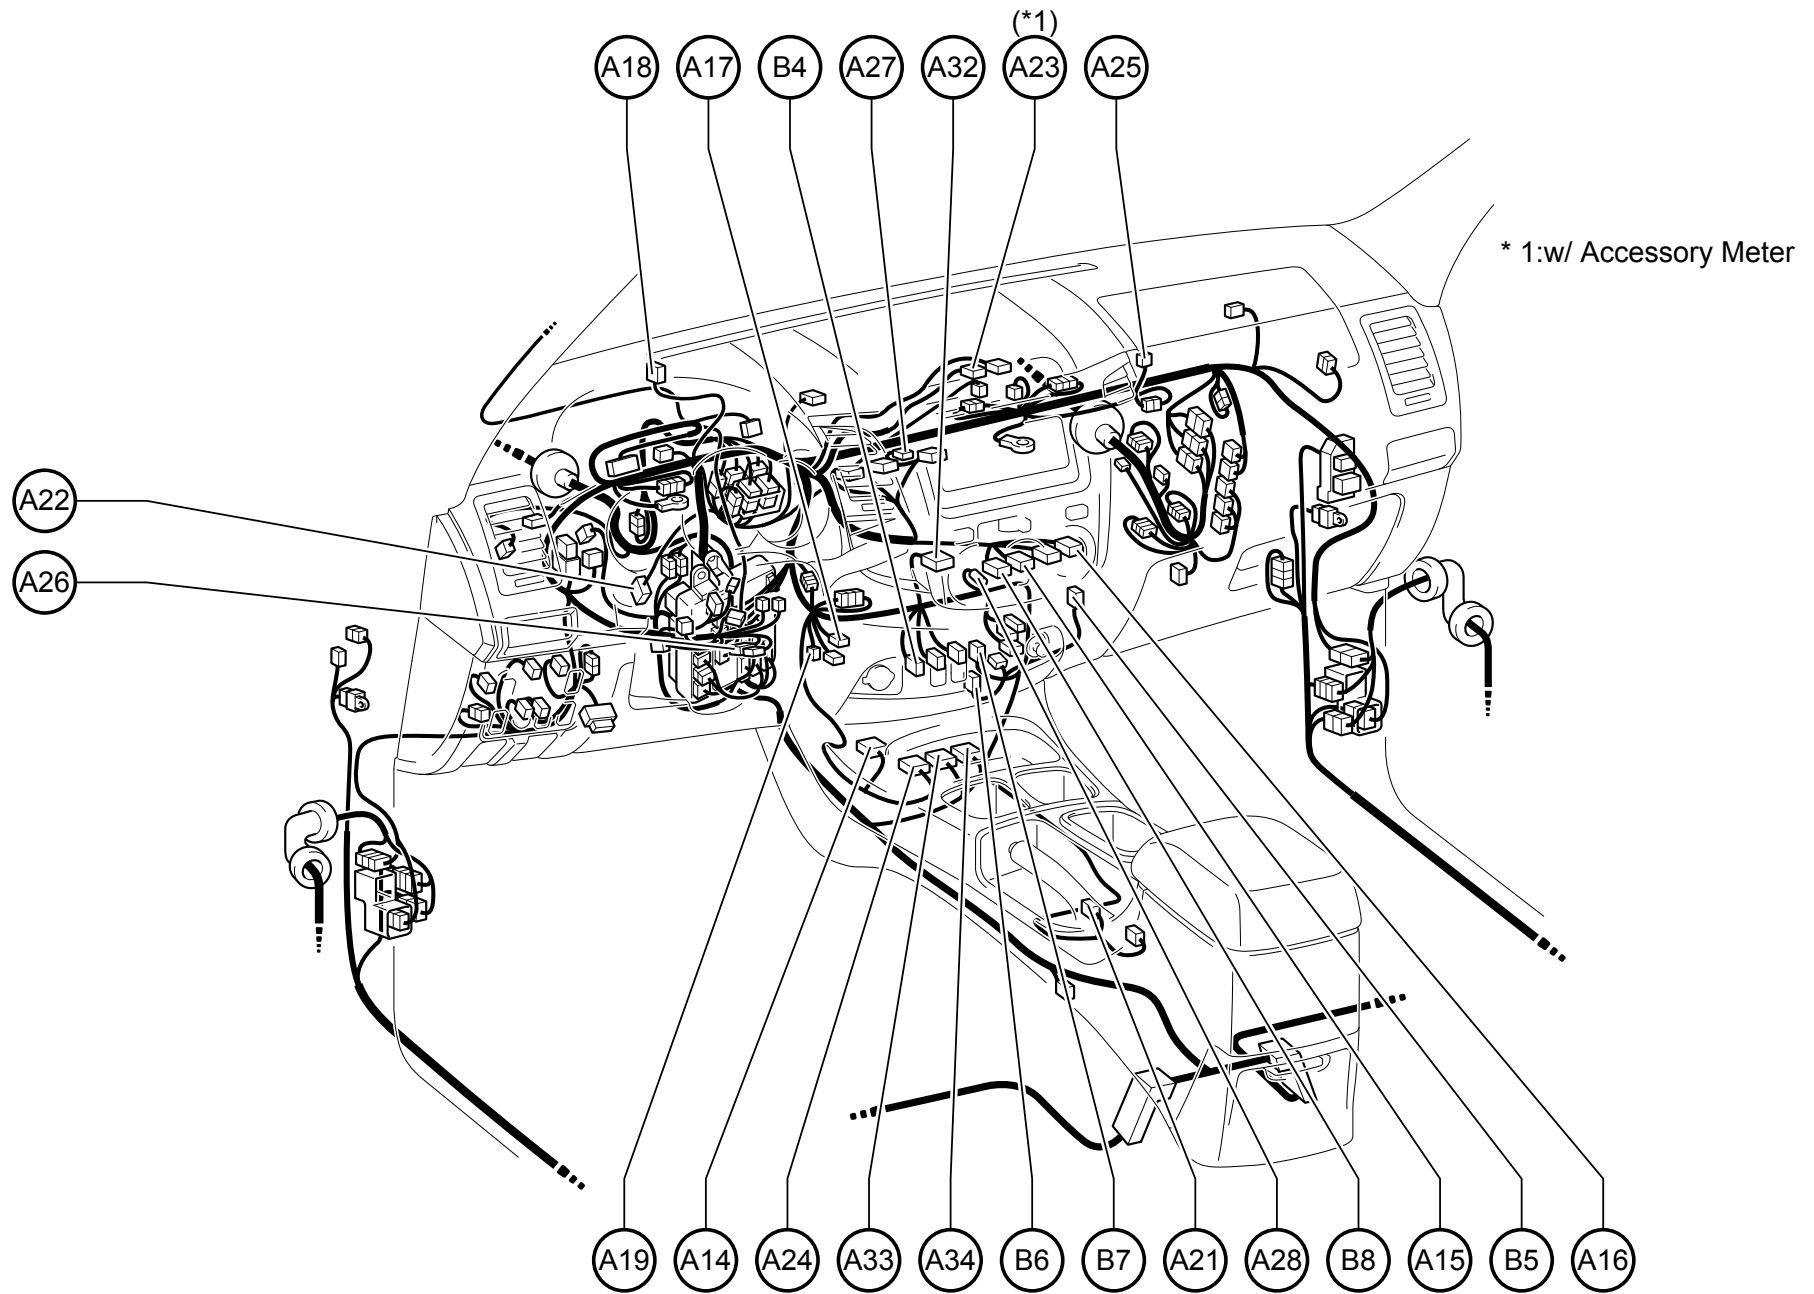


Position of Parts in Instrument Panel <LHD>


- A 14 A/C Amplifier
- A 15 A/C Control Assembly
- A 16 A/C Control Assembly
- A 17 A/C Room Temp. Sensor
- A 18 A/C Solar Sensor
- A 19 A/C Thermistor
- A 21 A/T Shift Lever Illumination
- A 22 Accelerator Position Sensor
- A 23 Accessory Meter
- A 24 Airbag Sensor Assembly Center
- A 25 Airbag Squib (Front Passenger's Airbag Assembly)
- A 26 Airbag Squib (Steering Wheel Pad)
- A 27 Antenna Amplifier
- A 28 Ashtray Illumination
- A 32 A/C SW
- A 33 Airbag Sensor Assembly Center
- A 34 Airbag Sensor Assembly Center

- B 4 Back Sonar SW
- B 5 Blower Motor
- B 5 Blower Motor
- B 6 Blower Motor Control
- B 7 Blower Resistor
- B 8 Blower SW

  


Position of Parts in Instrument Panel <LHD>

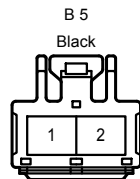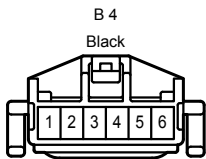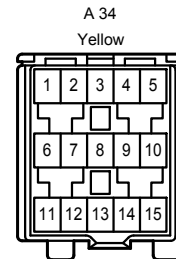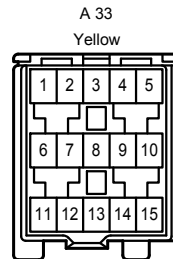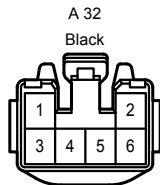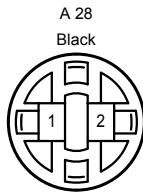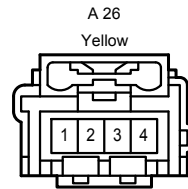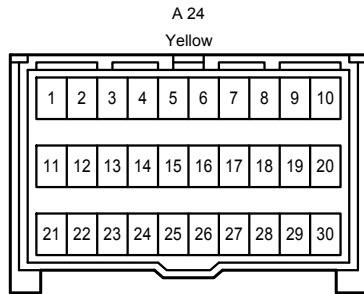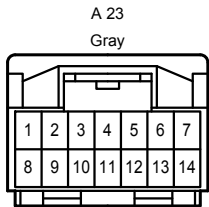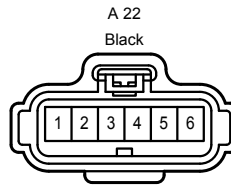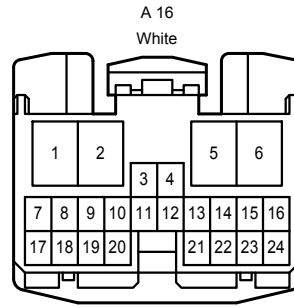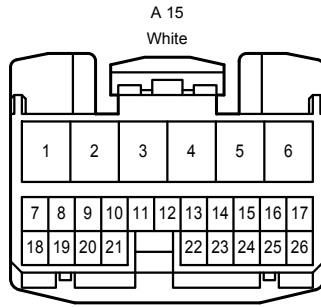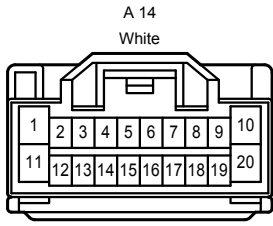


(From Aug. 2008 Production)

 

(Before Aug. 2008 Production)

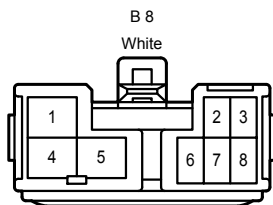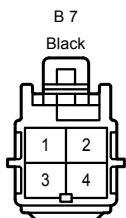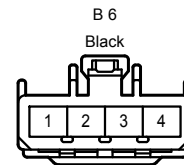

Position of Parts in Engine Compartment <LHD 1KD-FTV>

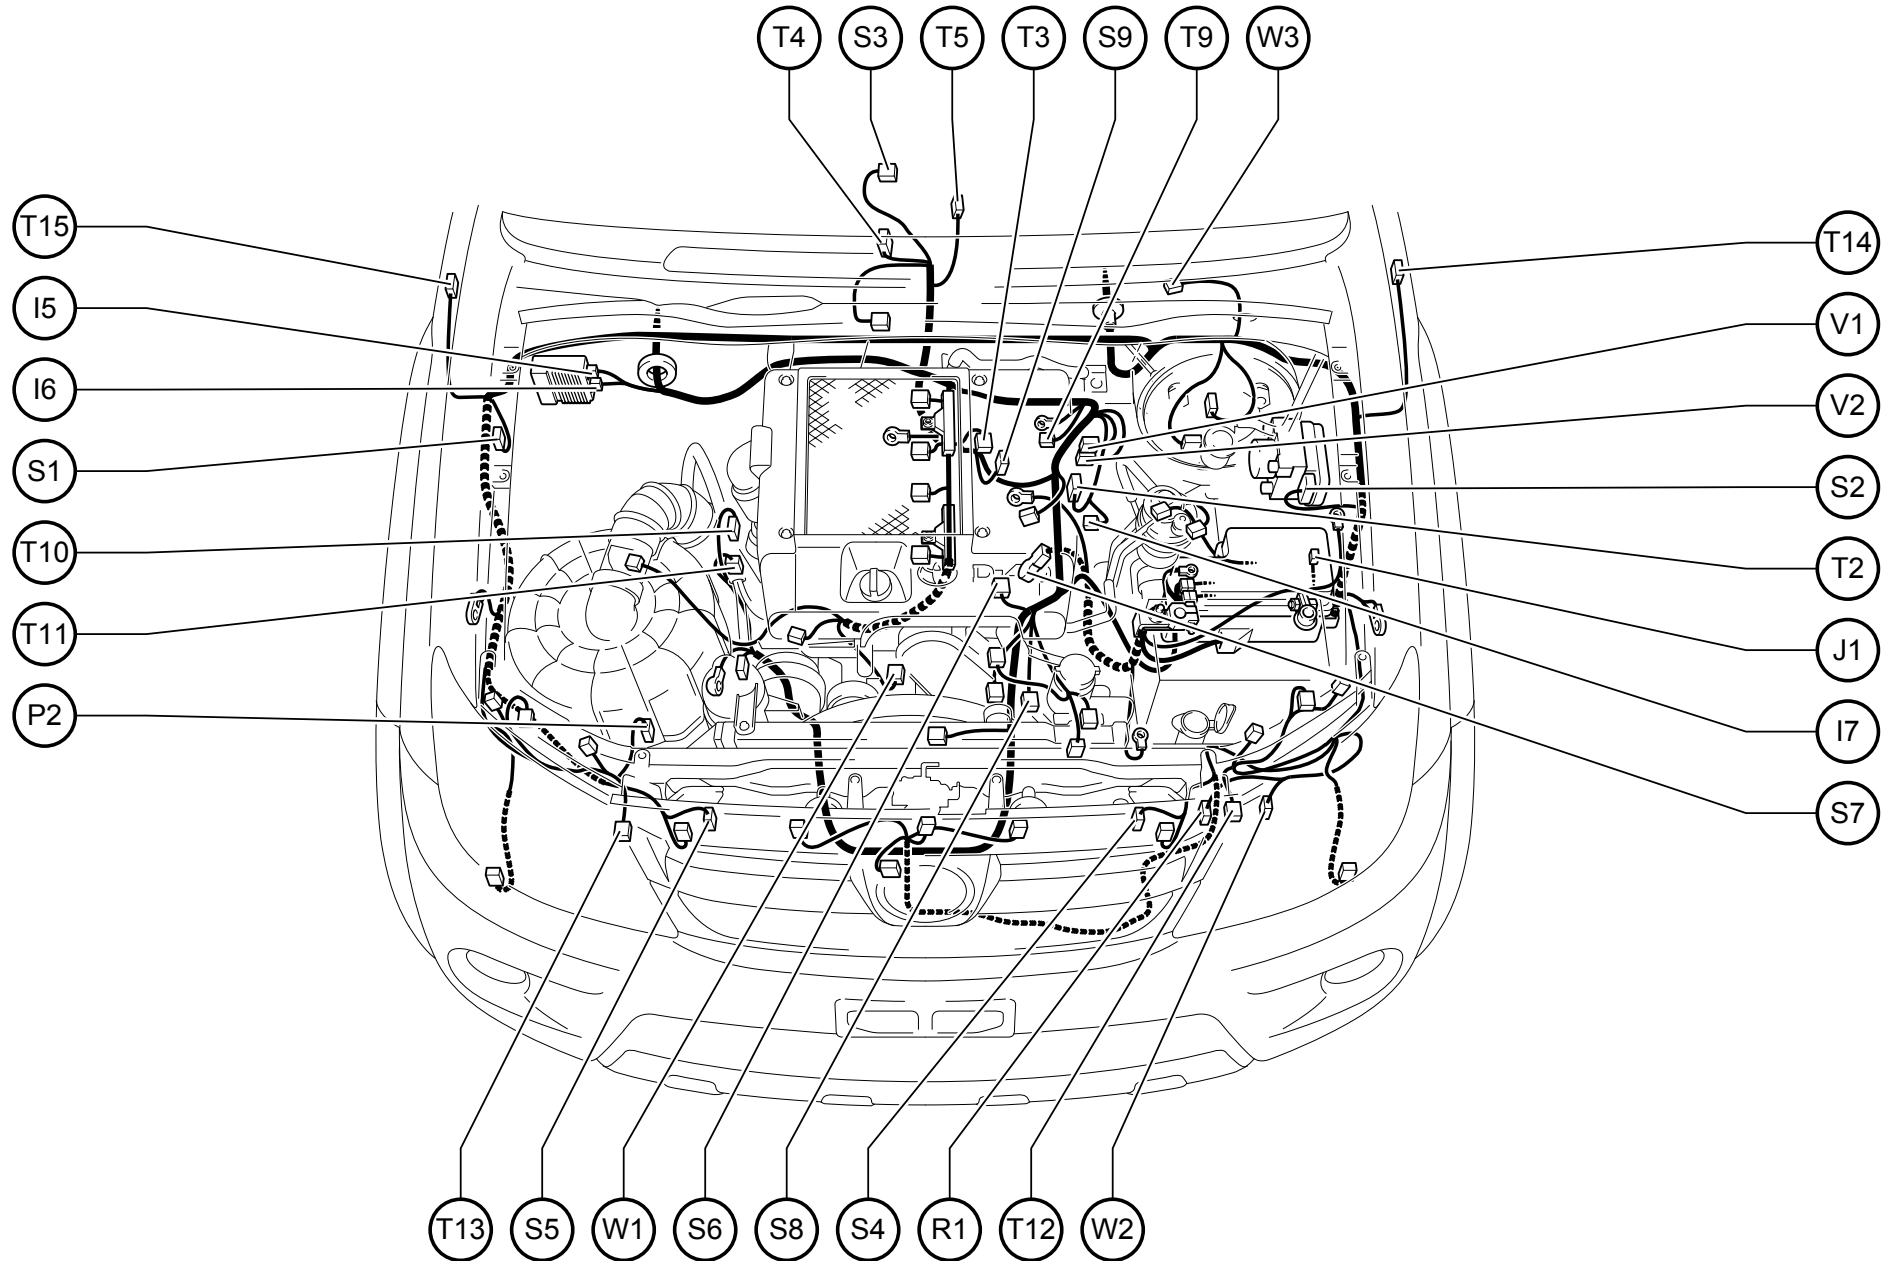

Position of Parts in Engine Compartment <LHD 1KD-FTV>

- I 5 Injector Driver (EDU)
- I 6 Injector Driver (EDU)
- I 7 Inlet Air Temp. Sensor

- J 1 Junction Connector

- P 2 Pressure SW

- R 1 Rear Washer Motor





















- S 1 Security Horn
- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter
- S 8 Suction Control Valve
- S 9 Swirl Control Valve

- T 2 Throttle Body Assembly
- T 3 Throttle Body Assembly
- T 4 Transfer Indicator SW (Center Diff. Lock)
- T 5 Transfer Indicator SW (L4 Position)
- T 9 Turbo Pressure Sensor
- T 10 Turbocharger Variable Nozzle Motor
- T 11 Turbocharger Variable Nozzle Sensor
- T 12 Turn Signal Lamp (Front LH)
- T 13 Turn Signal Lamp (Front RH)
- T 14 Turn Signal Lamp (Front Side LH)
- T 15 Turn Signal Lamp (Front Side RH)

- V 1 VRV (EGR)
- V 2 VSV (EGR Cut Valve)

- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

Position of Parts in Engine Compartment <LHD 1KD-FTV>

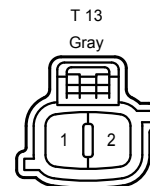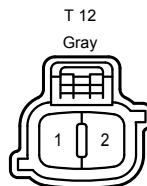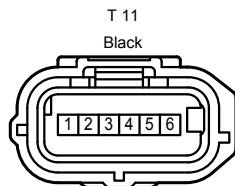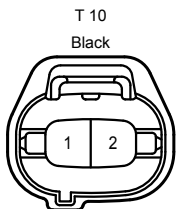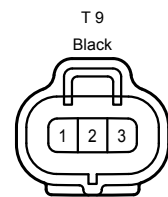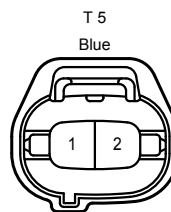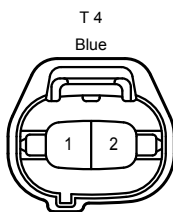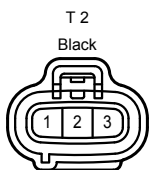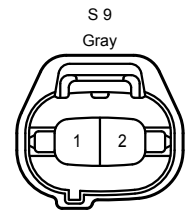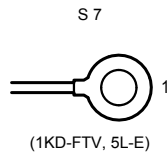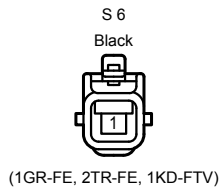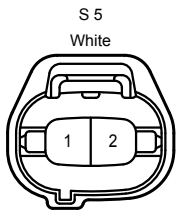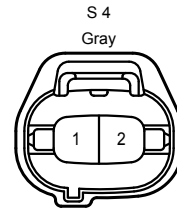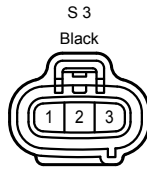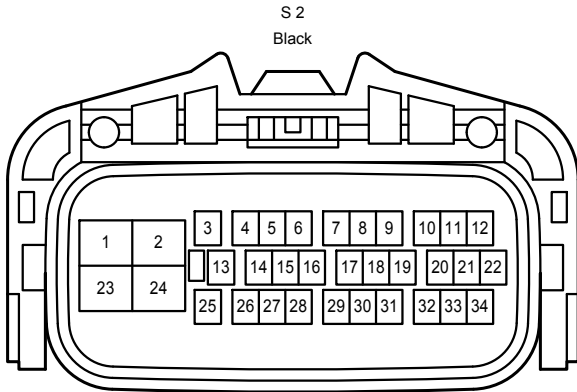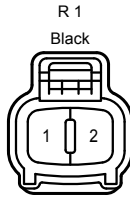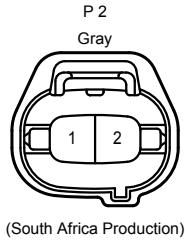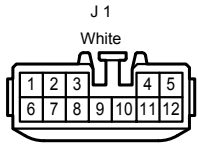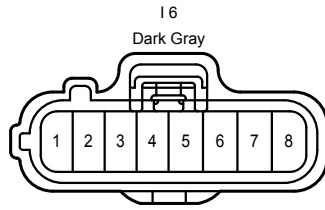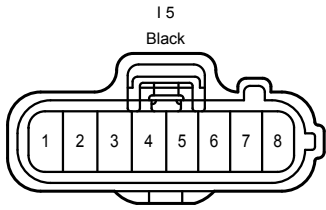

Position of Parts in Engine Compartment <LHD 1KD-FTV>

T 15

Gray




V 1

Black



V 2

Brown

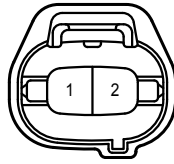


W 1

Black




W 2

Black

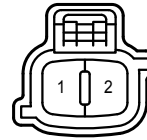

W 3

Black

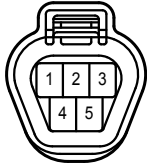

WM

GET YOUR WORKSHOP MANUAL

INSTANT PDF DOWNLOAD

Access the complete repair & service information
for thousands of makes and models — all in one place.

- ✓ Full Factory-Level Workshop Manuals
- ✓ Wiring Diagrams & Electrical Schematics
 - ✓ Step-by-Step Repair Procedures
- ✓ Torque Specs, Fluid Capacities & More
- ✓ Instant PDF Download — No Waiting
- ✓ All Makes & Models — Cars, Trucks & SUVs

VISIT [WORKSHOPMANUALS.COM](https://workshopmanuals.com/)

<https://workshopmanuals.com/>

Toyota Fortuner 2004–2016 Workshop Manual

Complete Service & Repair Guide | Instant PDF Download | All Engines & Variants

<https://workshopmanuals.com/shop/make/toyota-fortuner-2004-2016-workshop-and-service-manual-pdf/>

TOYOTA FORTUNER 2004–2016

WORKSHOP MANUAL

TABLE OF CONTENTS

1. Introduction & Vehicle Identification	4
2. Engine Mechanical (Petrol & Diesel)	35
3. Cooling & Lubrication Systems	98
4. Fuel System & Engine Management	142
5. Transmission (Manual & Automatic) & Driveline ..	186
6. Brakes, Suspension & Steering	224
6. Brakes, Suspension & Steering	224
7. Bodywork, Interior & Exterior Trim	268
8. Electrical System & Wiring Diagrams	312
9. Troubleshooting & Diagnostics	356
10. Maintenance & Service Schedule	394

WORKSHOP MANUAL FEATURES:

- Complete step-by-step repair procedures.
- Detailed illustrations, diagrams and photos.
- Torque specifications and capacities.
- Troubleshooting and diagnostic guidance.
- Wiring diagrams for all systems.
- Routine maintenance schedules.

IMPORTANT SAFETY NOTICE:

Always follow safety precautions and procedures outlined in this manual and consult professional guidance if unsure. Use appropriate tools and protective equipment. This manual is for informational purposes.

PUBLISHER INFORMATION:

Published by Automotive Workshop Manuals International.
All rights reserved. Printed in USA.

Part Number: TF-0416-WM

ISBN: 978-1-800000-00-1



9 781800 000001

WORKSHOPMANUALS.COM